

# User Manual Automatic Towel Dispenser

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

## General Safety

- The appliance must not be installed on, near or above a heat source.
- The appliance must not be installed outdoors.
- Water jets must not be used for cleaning the appliance.
- In case of damages, the appliance must be immediately taken out of service and Industrie Celtex's Technical Dept. must be informed.
- Defective appliances must not be disposed with household waste. The appliance must be returned to Industrie Celtex.
- Used batteries must be disposed as hazardous waste in accordance with all regulations.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Children shall not play with the appliance.
- Operating temperature ranges from 10 to 45°C.

## Technical Data

Automatic Towel Dispenser

Battery mode: 4x LR20, 6 V DC

Paper roll diameter: 200 mm

Paper core diameter: 39 mm

Dispensed paper length: 150-800 mm

Revision status: 07/2020

## Made in EU

INDUSTRIE CELTEX S.p.A.,

via Traversa del Marginone 21/23

 
Phone: +39 0583 2741

info@celtex.it - [www.industrieceltex.com](http://www.industrieceltex.com)




**INDUSTRIE CELTEX®**

# Installation Guide

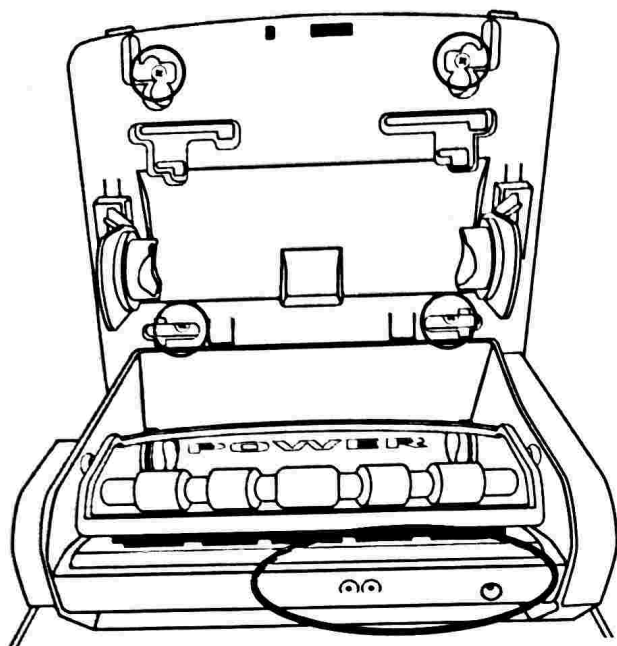

 Secure the dispenser to wall with 4 mounting screws.  
Do not use glue to install.

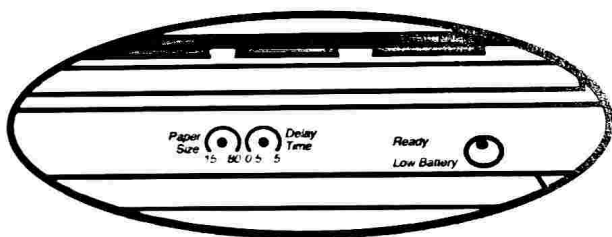

## 2 LEDs

When the sensor is activated, red and blue LEDs light up briefly. It can only be observed when the hood is closed (Ready).

A blink red light indicates when batteries need replacing. (Low battery).

## Settings

Factory setting:

Paper Size: 30 cm

Delay Time: 0.5 sec



To change the settings use a small flat screwdriver.

The settings can be adjusted continuously.



Paper Size: 15 cm - 80 cm

Delay Time: 0.5 - 5.0 sec

## Inserting the batteries

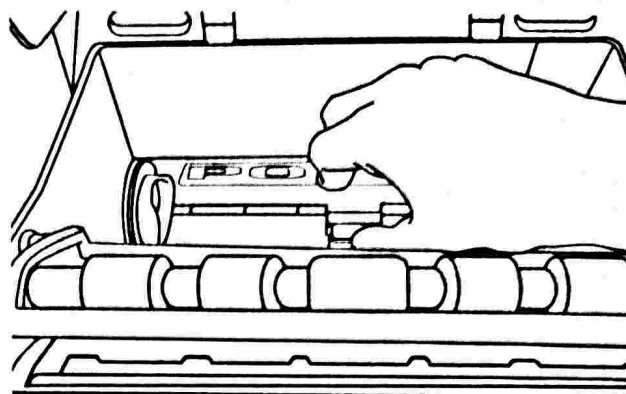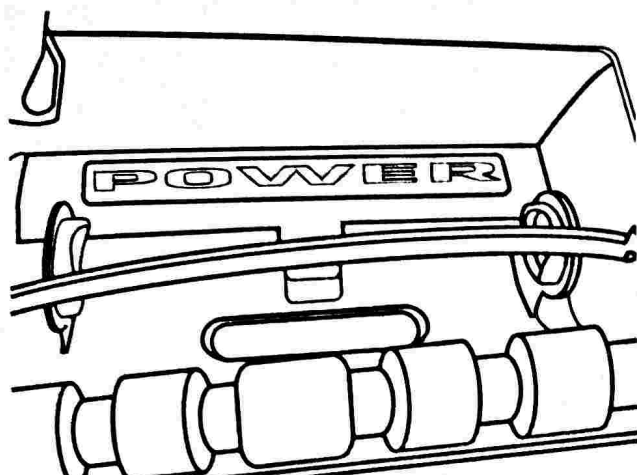

Slide and lift the battery compartment lid, insert **4 LR20 (size D, mono cells) alkaline batteries** with correct polarity, and close the battery compartment lid.

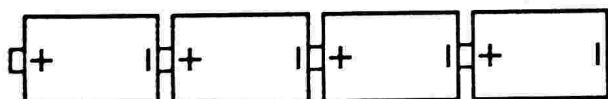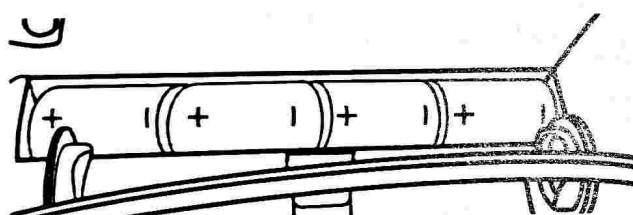


**Do immediately remove exhausted batteries!**  
**Replace all batteries of a set at the same time.**

**Please mind the polarity of the battery!**

### Additional safety instructions regarding batteries

- Do not charge non rechargeable batteries.
- Do not use old and new batteries together.
- When the battery set is discharged, replace all the batteries at the same time.
- Remove dead batteries from equipment.


## Loading instructions

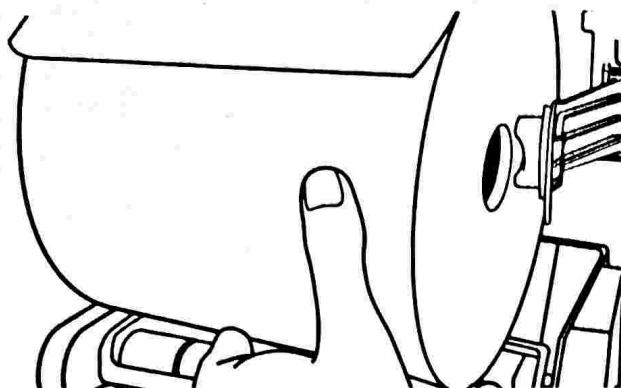

Insert the paper towel roll between paper holders and make the core fit properly into holder arms.




Press the rocker in the rear area downwards to insert the paper. Bring the paper under the rocker front arm.

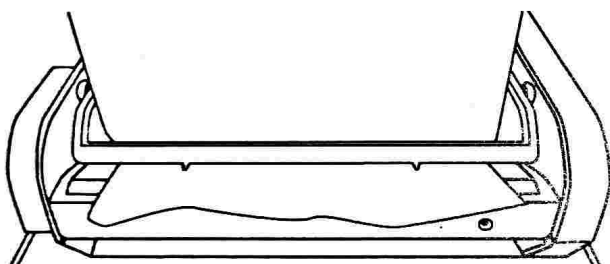

Release the rocker and close the hood. The dispenser will feed the paper automatically.

## Using the residual roll function

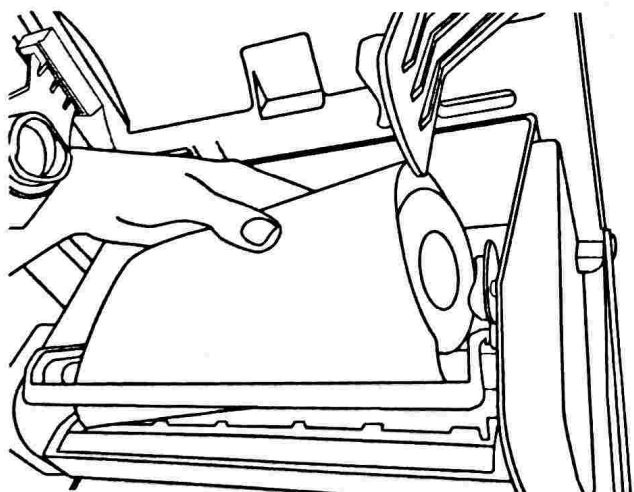

When the roll reaches the edge of paper holders, it can be placed in the cabinet for reserve roll without interrupting paper feed.



Afterward a new roll can be placed above the residual roll. The loosened paper is placed under the rocker without any change in the rocker position. The dispenser switches rolls automatically.